


Fiback™ Weld Backing Tape : How it Works




Step 1: Peel away backing tape covers from both sides. Gently coil the adhesive tape edges back and push the woven fiberglass strip outwards.

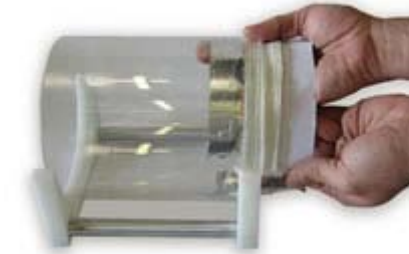

Step 2: Center and apply the woven fiberglass strip firmly to the backside of the root gap.



Step 3: Beginning from the center and slowly moving outward, apply the adhesive aluminum tape to the area surrounding the root gap, providing a smooth, air-free seal.

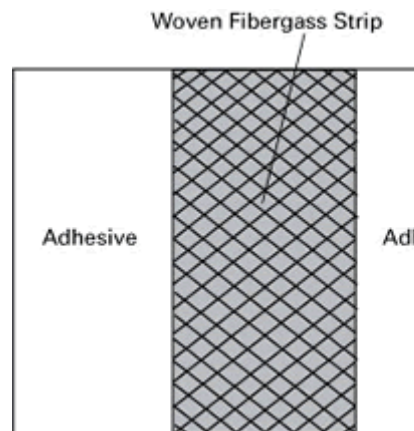

Fiback Weld Backing Tape consists of two outer adhesive strips separated by a woven fiberglass center strip. The adhesive edges stick to the area surrounding the root gap with the woven fiberglass strip being positioned to the backside of the root gap.

See below for sheet to sheet application:



Carbon



Stainless