


How to Use Fiback®

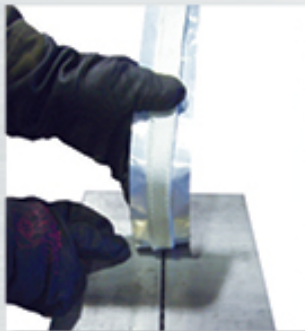


1 **ALIGN**

Align desired base metals with the required root gap. Center the fiberglass strip over the backside of the root gap.



2 **POSITION**

Position the fiberglass strip in a convex shape away from the backside of the weld area to contain the purge gas from the torch tip but avoid consuming the material.

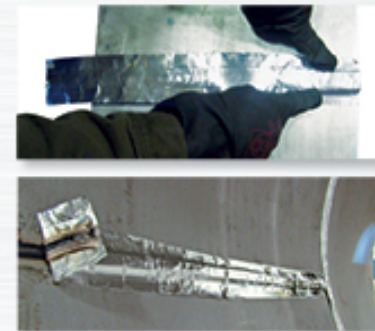

3 **PRESS**

Press adhesive sections of tape along sides, centering fiberglass strip over weld joint and continuing over the entire length of the metals. Upon completion of welding, allow the piece to cool before removing tape.